


# SL050LD

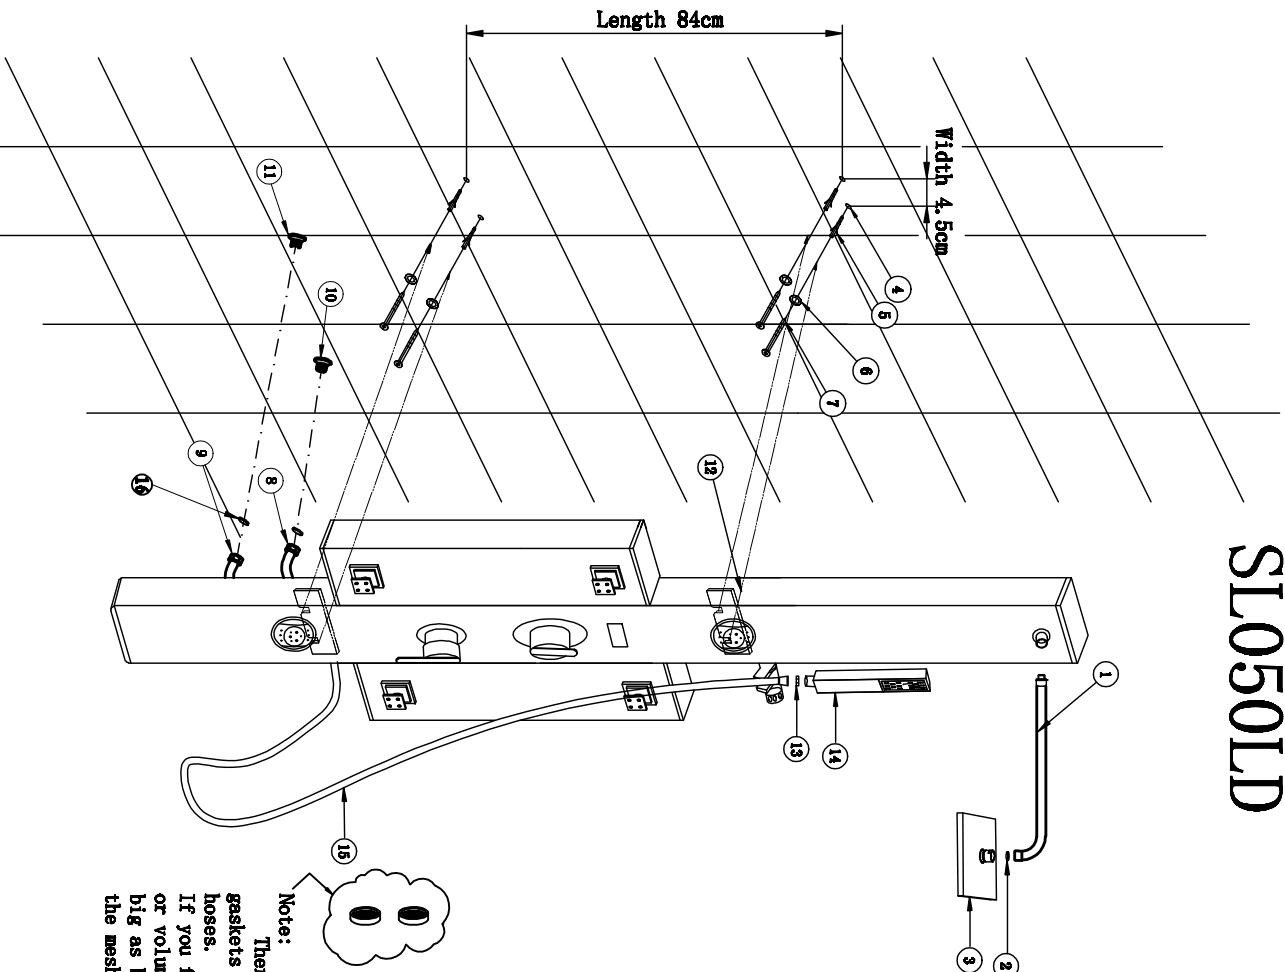

**Note:**  
There are two mesh gaskets **8** in the supply hoses.  
If you find that pressure or volume of water is not big as before, pls clean the mesh gaskets timely.

- 1) scure brass tube **1** on the panel by screwing
- 2) put gasket (18X10X6)**2** into shower head **3**;
- 3) connect shower head **3** with brass arm **1**;
- 4) drill four  $\varnothing 7$  holes**4** on the wall (reference position: width: 4.5cm, length: 84cm, depth: 4cm. note: please mark the position on the wall according to the distance between notches of hooks before drilling holes.);
- 5) put plastic plugs**5** into the wall;
- 6) put screws **7** into washers **6**;
- 7) put screws **7** into the wall (note: do not screw screws completely into the wall and keep 0.5cm from the wall.);
- 8) connect nuts **8** and **9** with hot water outlet**10** and cold water outlet **11** separately;
- 9) connect nuts **8** and **9** with hot water outlet**10** and cold water outlet **11** separately;
- 10) hang hooks**12** on the screws **7**;
- 11) put gasket (18x10x4)**13** into hose **15**;
- 12) install hose**15** and hand shower **14**.