


SL050LDS

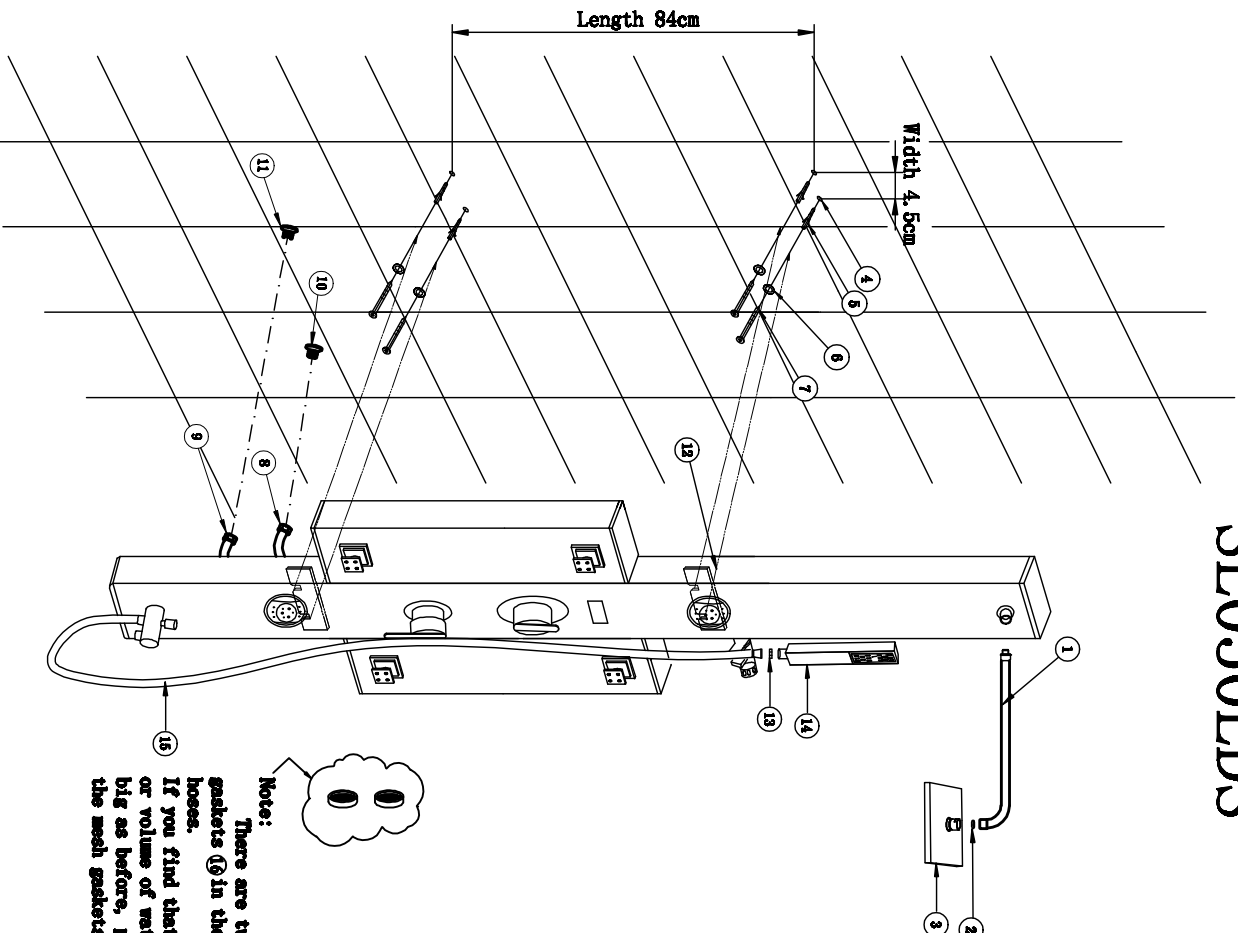

- 1) scure brass tube ① on the panel by screwing
- 3) put gasket (18X10X6) ② into shower head ③;
- 4) connect shower head ③ with brass arm ①;
- 5) drill four Ø7 holes ④ on the wall (reference position: width: 4,5cm, length: 84cm, depth: 4cm. note: please mark the position on the wall according to the distance between notches of hooks before drilling holes.);
- 6) put plastic plugs ⑤ into the wall;

- 7) put screws ⑦ into washers ⑥;
- 8) screw screws ⑦ with washers ⑥ into the wall (note: do not screw screws completely into the wall and keep 0,5cm from the wall.);
- 9) connect nuts ⑧ and ⑨ with hot water outlet ⑩ and cold water outlet ⑪ separately;
- 10) hang hooks ⑫ on the screws ⑦;
- 11) put gasket (18x10x4) ⑬ into hose ⑮;
- 12) install hose ⑮ and hand shower ⑭.

Note:
There are two mesh gaskets ⑬ in the supply hoses.
If you find that pressure or volume of water is not big as before, pls clean the mesh gaskets timely.